



PLAN VIEW

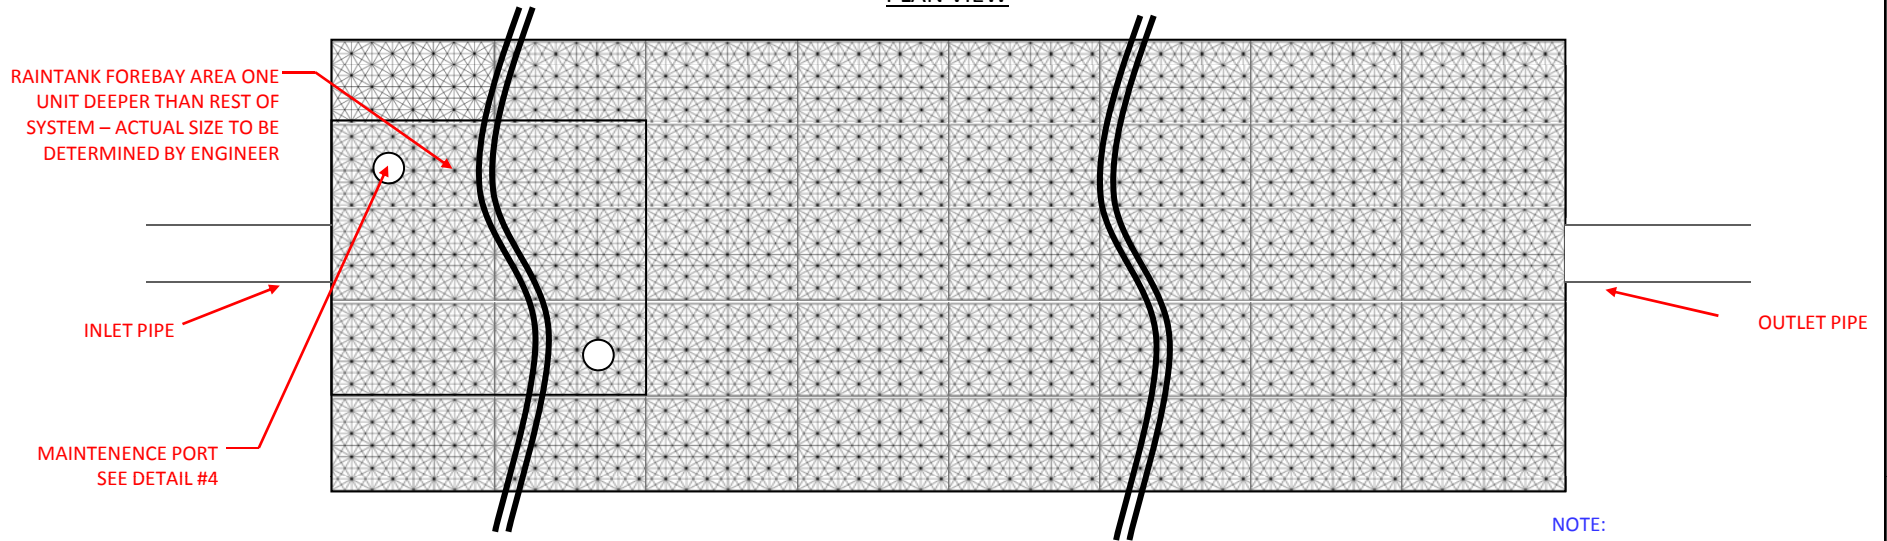



PROFILE VIEW

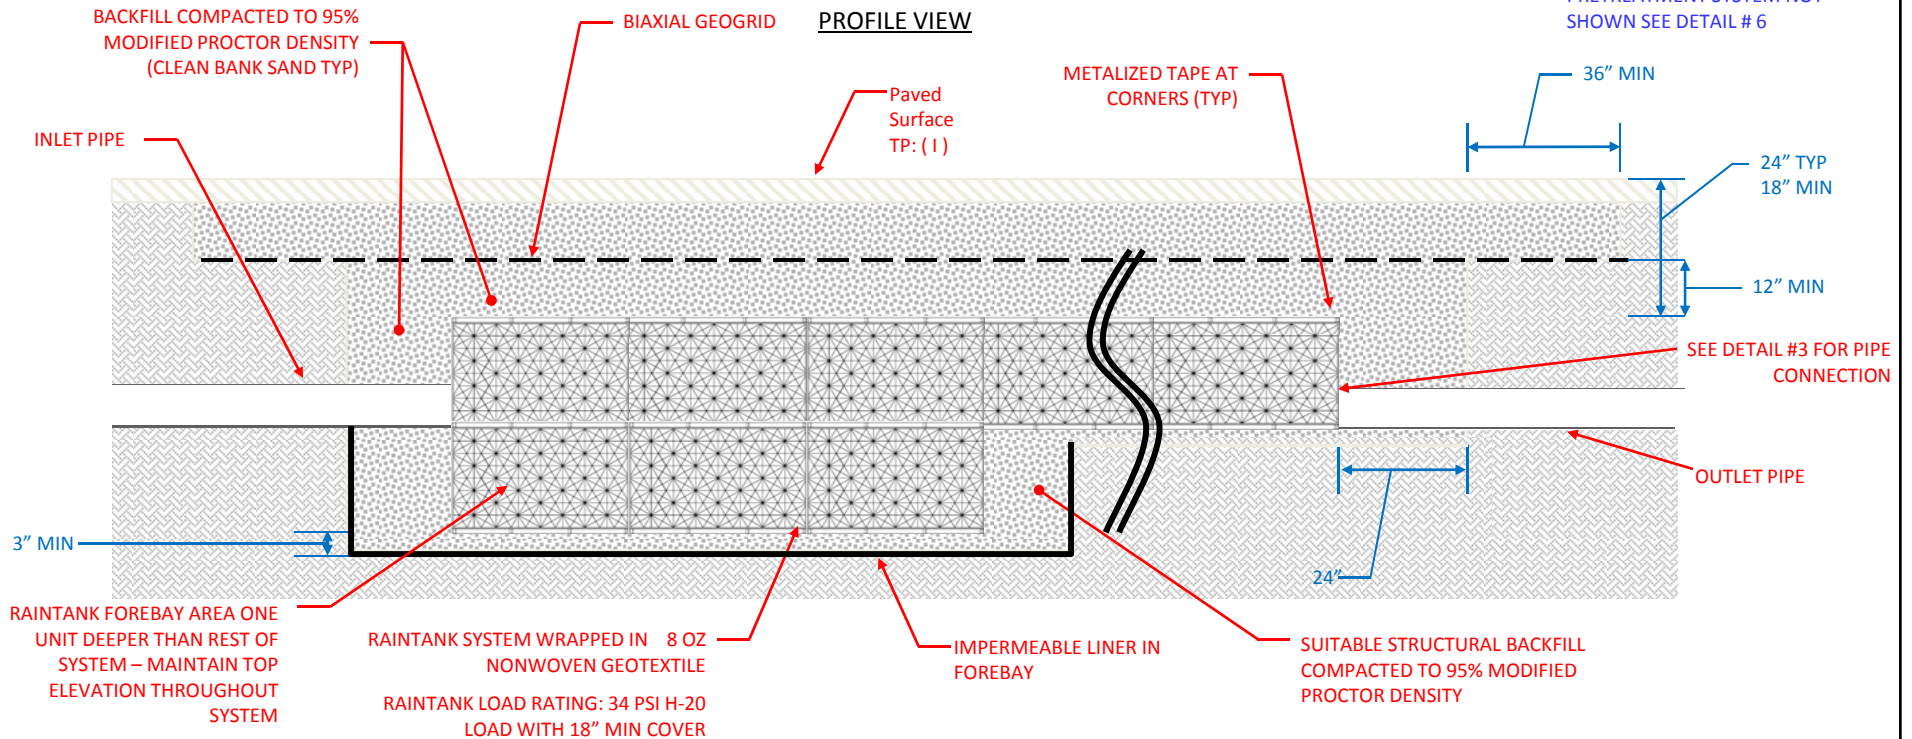

NOTE:
PRETREATMENT SYSTEM NOT
SHOWN SEE DETAIL # 6

MAINTENANCE PORT

THIS PORT IS USED TO PUMP WATER INTO THE SYSTEM AND RESUSPEND ACCUMULATED SEDIMENT SO THAT IT MAY BE PUMPED OUT. MINIMUM REQUIRED MAINTENANCE INCLUDES A QUARTERLY INSPECTION FOR THE FIRST YEAR OF OPERATION AND A YEARLY INSPECTION THEREAFTER. FLUSH AS NEEDED

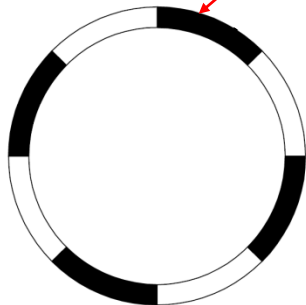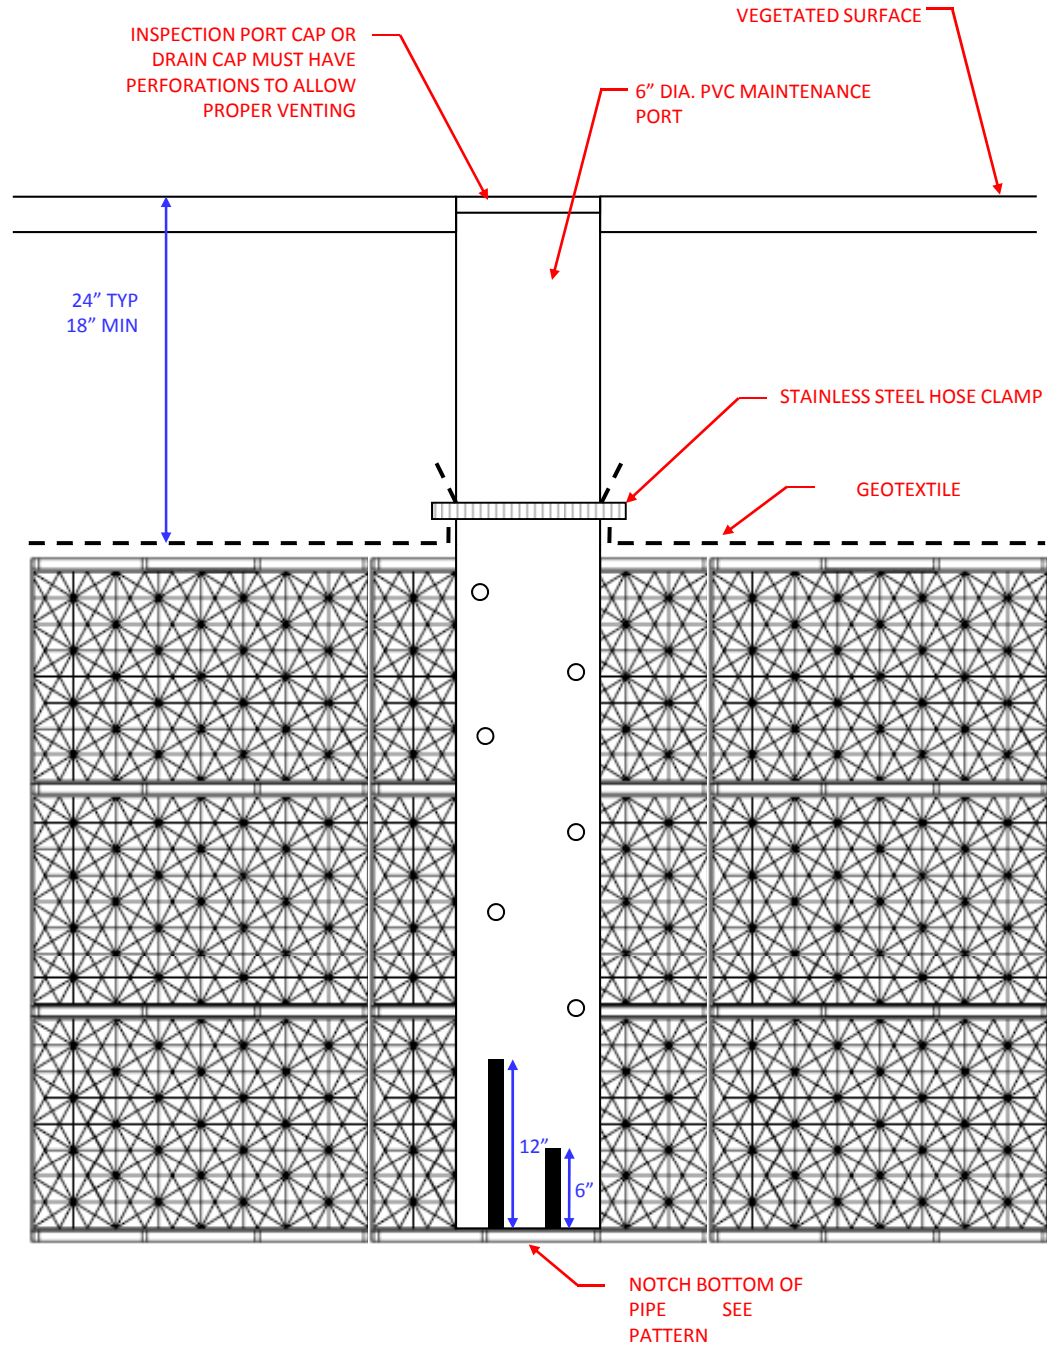

PIPE NOTCHING PATTERN

INSPECTION / VENT PORT



FOR ADDITIONAL INFORMATION CONTACT CONSTRUCTION ECOSERVICES

P: 832.456.1000 • WWW.ECOSYS.COM • F: 832.456.1010

